



# C1400 Conveyor Oven

## Hunt Brothers Startup Guide



Electrical specifications = 208/240 V, 8.6/11.4 kW, 41/45A, 1Φ, NEMA-6-50P plug



Tech Service Phone Number  
Identify as Hunt Brothers for proper service

Angled End Stop

This oven is set up for  
left-to-right operation.

Crumb Tray

Standby Button

## YOU OWN THIS OVEN — TAKE CARE OF IT

### Installation

1. Install the unit in an appropriate location with a minimum of 1" (25 mm) clearance at the back and on both sides and connected to a dedicated 50 A circuit.

**CAUTION! Lift from underneath the front and rear of the oven chamber only with the appropriate number of people.**

- Locate the unit where the ambient air temperature is constant and between 70°F (21°C) and 100°F (38°C).
  - Follow Ovention recommendation when stacking with other manufacturers' ovens. Stacking kits available directly from Ovention to stack up to three C1400s.
  - Make sure the countertop is level, made of non-combustible material, and strong enough to support the weight.
2. Install a crumb tray and conveyor end stop at each end of the conveyor frame and plug in power cord.

### Start Up and Operation

1. Push the Standby button to turn on the unit. Select Desired Item screen will appear.
2. Set the belt direction. *NOTE: Always set belt direction before initial oven warmup.*
3. Touch one of the conveyor settings. Allow 15–20 minutes for the oven to reach setpoint temperature and stabilize.
  - The oven is ready for cooking when the conveyor belt begins moving and the Select Desired Item screen reappears.
4. Place food product onto the conveyor belt. Continue loading food product as needed.
5. Remove cooked food product from the opposite side of the conveyor assembly.



**CAUTION! BURN HAZARD: Pan/tray will be very hot upon removal—use oven mitt, pan gripper, or other utensil to remove.**

Reference Recipe Programming Guide to edit any recipes.



### Changing Belt Direction

1. If oven is already warm, cycle Standby button off then back on.
2. From the Select Desired Item screen, touch the "up" arrow, input the password using the keypad, and touch ENTER.
3. On the Admin Mode screen, touch MAINT to access the Maintenance Mode screen.
4. Touch CONFIG on the Maintenance Mode screen and the Oven Configuration screen appears.
5. Touch DEFAULT SIDE to toggle the direction of the conveyor belt between left-to-right and right-to-left.

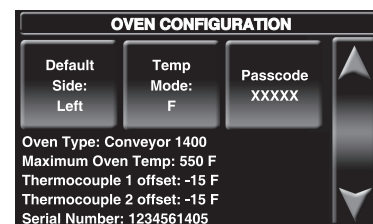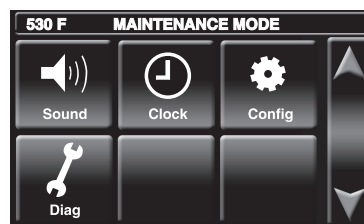

### Shutdown

**WARNING! ELECTRIC SHOCK HAZARD:** Press Standby button, cooldown, and unplug before cleaning, maintenance, or service.

1. Push the Standby button to turn off the unit.

**CAUTION! Do not turn off Main Disconnect switch or unplug unit immediately after use. Internal fans must cool oven to avoid damage to electrical components.**



#### Cleaning/Maintenance

Clean the unit daily. Scan the QR code for detailed cleaning instructions.



To read safety, installation, operation, and maintenance details, view or print the manual at [www.ovationovens.com](http://www.ovationovens.com), or scan the QR code, before use to prevent injury, death, or damage.