





Programming Conveyor Settings


Use the following procedure to edit or create conveyor settings. This procedure requires access to password-protected screens and should be performed by authorized personnel only.

NOTE: The USB port allows the uploading of pre-programmed conveyor settings from an external USB drive. Refer to the "Uploading from a USB Drive" procedure in this section for details.

1. From the Select Desired Item screen, touch the "up" arrow.
 - A password keypad will appear on the touchscreen.
2. Input the password using the keypad, and touch ENTER.
 - The Admin Mode screen will appear on the touchscreen.
3. Touch RECIPES to access the Recipe Development screen
 - The Recipe Development screen will appear. This screen will look like the Select Desired Item screen.
4. Edit or create a conveyor setting.
 - **To edit** an existing conveyor setting, touch the desired setting.
 - **To create** a new conveyor setting, touch an empty box. If no empty boxes are available, touch the "down" arrow to scroll to the next screen.
 - The Edit Preset Data screen will appear.
5. Touch each "setting" box on the Edit Preset Data screen to edit the corresponding setting. Common settings include item name, top blower percentage, bottom blower percentage, and cook temperature.
 - Touching a "setting" box will bring up a keypad specific to the setting. Enter the desired value using the keypad, then touch ENTER to return to the Edit Recipe Settings screen.
 - Menu item names can have up to 16 characters.
6. When conveyor setting programming is complete, touch SAVE AND EXIT on the Edit Preset Data screen.
 - The Recipe Development screen will appear.
 - To program additional menu items, repeat steps 4 and 5 of this procedure.
7. If all programming is complete, touch the "up" arrow on the first (screen 1 of 9) Recipe Development screen to return to the Admin Mode screen.

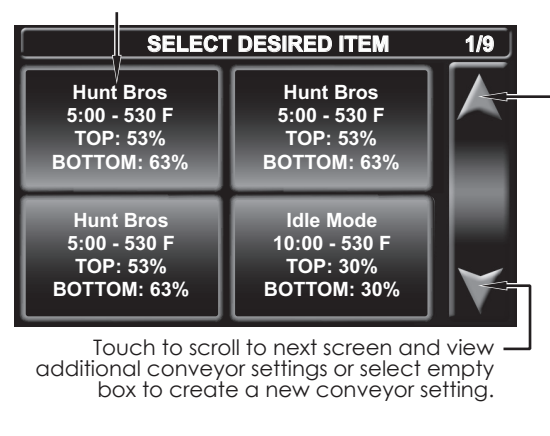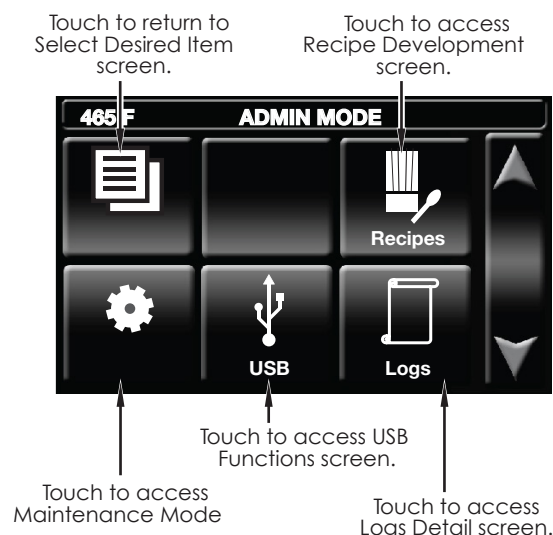

Touch to exit without saving and return to Recipe Development screen.

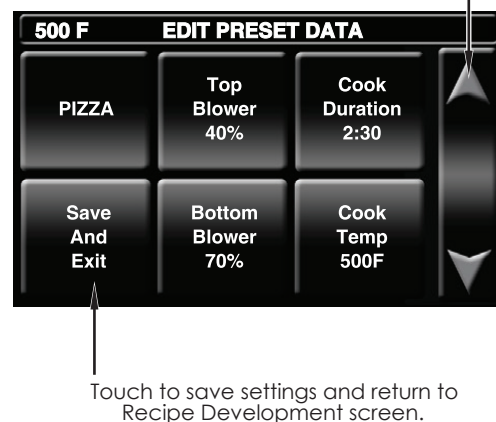



Programming Conveyor Settings - Uploading from a USB Drive

Use the following procedure to upload pre-programmed menu items or firmware updates from an external USB drive. This procedure requires access to password-protected screens and should be performed at oven startup by authorized personnel only.

1. Push the Standby button to turn on the unit.
 - The touchscreen will energize. After the Startup Screen the Select Desired Item screen appears.
2. Remove the cover from the USB port below the Standby button, and insert the USB drive into the port.
3. From the Select Desired Item screen, touch the "up" arrow.
 - A password keypad will appear on the touchscreen.
4. Input the password using the keypad, and touch ENTER.
 - The Admin Mode screen will appear on the touchscreen.
5. Touch USB to access the USB Functions screen.
6. Touch the desired function to begin the corresponding upload.
 - Select the upload file from the list that appears.
 - A screen will appear to indicate that the upload is in progress.
 - When the upload is complete, the oven will restart.
7. When the startup screens reappear, remove the USB drive from the USB port, and replace the port cover.
8. Perform the normal "Startup" procedure at the beginning of this section to use the oven.

