



1 With oven running, stand by the exiting belt. Push a damp scrub brush back forth over the hot belt. Use Ovention Cleaner* as needed. DO NOT splash cavity, fans, filters or controls.



2 Turn off the oven with the push button. When the oven is cool, the screens will read 'READY TO CLEAN'.



3 Open the oven door and remove top and bottom jet plates.



4 Remove crumb trays and end stops on both wings. Wipe down or wash as needed (dishwasher safe).



5 Place the dirty jet plates into a sink with hot water and soap. Spray* as needed and scrub and/or run through dishwasher.




6 Remove the **two** air filters from the back side of the oven, one per side.




7 Using hot water and soap, gently rinse all air filters. Allow them to air dry completely before reinstallation.



8 Spray rag with Ovention Cleaner* and wipe debris out of the cavity. Clean the inside of the door. NEVER spray directly into the oven.

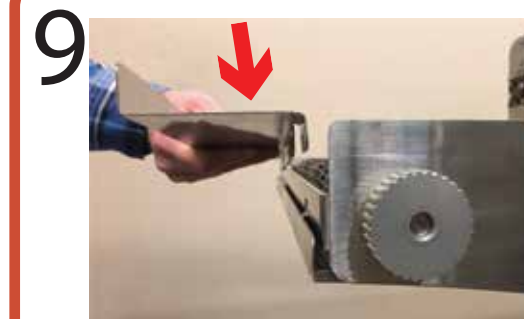

9 Replace each of the two jet plates, two air filters, two crumb trays and two end stops.

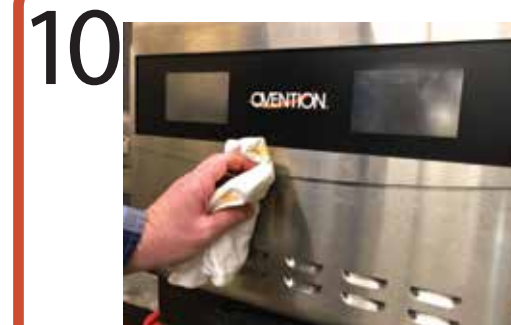

10 Polish and clean the exterior of the oven with a commercial-grade Ovention polish.



Buy now!
OVNTN-CLNR-P1

Call Ovention Customer Care at 414.615.1229

**Cleaning should be performed daily depending on usage and visible buildup. Only approved Ovention cleaning products are to be used. Use of unapproved cleaners may cause damage and may void the equipment warranty. Refer to the product manual for approved cleaning procedures and products.